

# TEMPERATURE CONTROLLER

33 X 72

ELKM3 model

Quick Guide



EL.CO. S.r.l.

Via Lago di Molveno, 20 - 36015 SCHIO (VI) ITALY  
Tel.: +39 0445 661722 - Fax: +39 0445 661792  
Sito internet: http://www.elco-italy.com  
E-mail: support@elco-italy.com

## ⚠ Warning!

- Whenever a failure or a malfunction of the device may cause dangerous situations for persons, things or animals, please remember that the plant must be equipped with additional devices which will guarantee safety.
- We warrant that the products will be free from defects in material and workmanship for 18 months from the date of delivery. Products and components that are subject to wear due to conditions of use, service life and misuse are not covered by this warranty.

## MODEL CODE

The hardware resources are identified by the following Model Code.

Model: **ELKM3** A B C D E F G H


Line	ELKM3
<b>Optional functions</b>	<b>A</b>
None	-
Timer	T
<b>Power Supply</b>	<b>B</b>
100...240 Vac (-15...+10%)	240
24 Vac (-25...+12%) or 24 Vdc (-15...+25%)	24
<b>Input</b>	<b>C</b>
TC, Pt100, Pt1000, mA, mV, V + Digital Input 1	C
TC, NTC, PTC, mA, mV, V + Digital Input 1	E
<b>Output OP1</b>	<b>D</b>
Relay (1 SPDT, 4 A/250 Vac)	R
VDC for SSR (12 Vdc/20 mA)	S
<b>Output OP2</b>	<b>E</b>
None	-
Relay (1 SPST NO, 2 A/250 Vac)	2R
VDC for SSR VDC for SSR (12 Vdc/20 mA)	2S

Output OP3	F
None	-
Relay (1 SPST NO, 2 A/250 Vac)	3R
VDC for SSR VDC for SSR (12 Vdc/20 mA)	3S
Output OP4	G
Digital I/O (see the Electrical Connections paragraph for details)	4D
Serial Communications	H
TTL	-
RS485 Modbus	S

Model Code example: **ELKM3-240-C-R-2R-3R-4D**

Controller ELKM3, no timer, 100...240 Vac, TC/Pt100/Pt1000/mV/V + Digital Input 1, 3 Relay Outputs, Output 4, TTL, non removable screw type terminals.

## DISPLAY AND KEYS

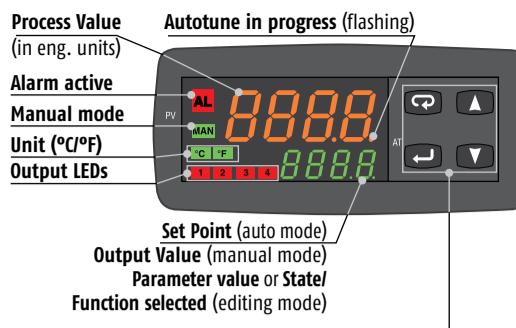


Operator Mode	Editing Mode
Access to: - Operator Commands - Parameters - Configuration	Confirm and go to Next parameter
Access to: - Operator additional information (Output value, running time ...)	Increase the displayed value or select the next element
Access to: - Set Point	Decrease the displayed value or select the previous element
Start the programmed function (Autotune, Auto/Man, Timer ...)	Exit from Operator commands/Parameter setting/Configuration

## DIMENSIONS

Overall dimensions (L x H x D): 78 x 35 x 69.5 mm  
(3.07 x 1.37 x 2.73 in.)  
Panel Cut-out (L x H): 71+0.6 x 29+0.6 mm  
(2.79+0.023 x 1.14+0.023 in.)


## MOUNTING

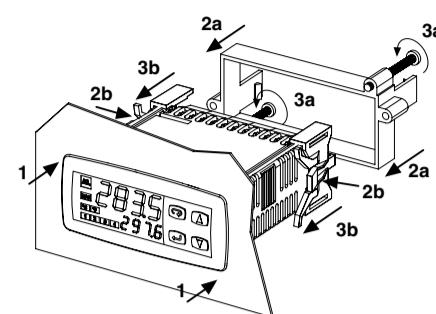

## ⚠ Attention

The controller can be installed using 2 different types of brackets. Follow the sequence 1, 2a, 3a for the closed version of the bracket, the sequence 1, 2b, 3b for the 2 pieces bracket type.

## ELECTRICAL CONNECTIONS

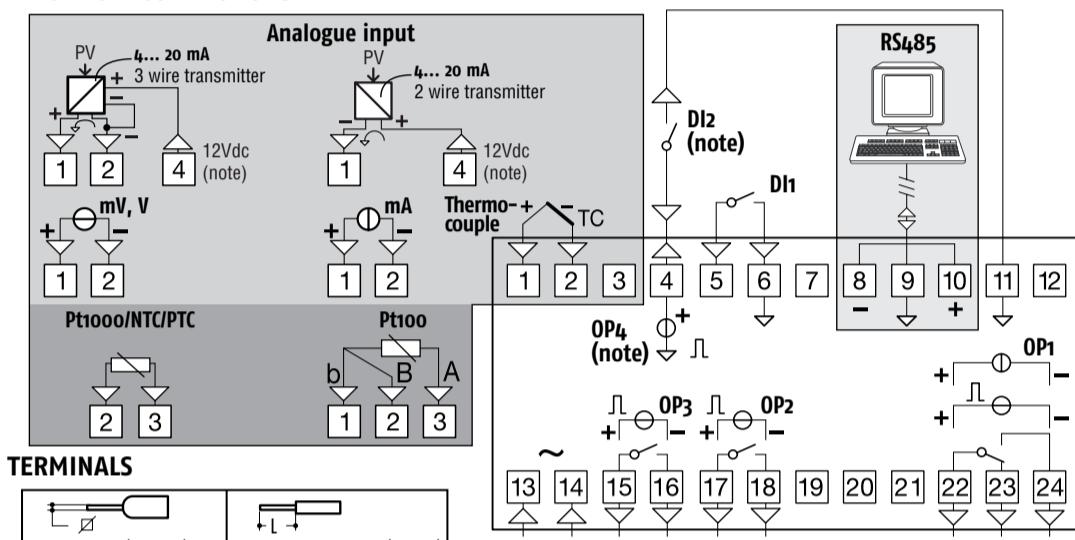

Note: Terminal 4 can be programmed as:

- Digital Input (DI2) connecting a free of voltage contact between terminals 4 and 11;
- 0...12 V SSR Drive Output (OP4) connecting the load between terminals 4 and 11;
- 12 Vdc (20 mA) transmitter power supply connecting the 2 wire transmitter between terminals 4 and 1; for 3 wire transmitter connect terminal 4 to transmitter power supply input and terminal 1 and 2 to transmitter signal output.

Supply voltage: 100...240 Vac/  
18...28 Vac/  
20...30 Vdc

## CONFIGURATION CODE

The ELKM3 can be easily configured by the "Code Configuration" method for the most common requirements, just entering two 4-digit codes: **Cod 1** [LMNO] for the Input Type and Control Mode selection and **Cod 2** [PQRS] for the Alarms and the Service Functions. For complete controller configuration see the Engineering Manual.

Note: Before starting the configuration code setting, please define and write down **Cod 1** and **Cod 2** as needed:


L M N O	User Cod 1	Cod 1	L M N O
<b>Input Type and Range</b>			
TCJ	-50...+1000°C	0 0	
TC K	-50...+1370°C	0 1	
TC S	-50...1760°C	0 2	
TC R	-50...+1760°C	0 3	
TCT	-70...+400°C	0 4	
Infrared J	-50...+785°C	0 5	
Infrared K	-50...+785°C	0 6	
PT 100/PTC KTY81-121	-200...+850°C/-55...+150°C	0 7	
PT 1000/NTC 103-AT2	-200...+850°C/-50...+110°C	0 8	
Linear 0...60 mV		0 9	
Linear 12...60 mV		1 0	
Linear 0...20 mA (this selection forces Out 4 = TX)		1 1	
Linear 4...20 mA (this selection forces Out 4 = TX)		1 2	
Linear 0...5 V		1 3	
Linear 1...5 V		1 4	
Linear 0...10 V		1 5	
Linear 2...10 V		1 6	
TCJ	-58...+1832°F	1 7	
TC K	-58...+2498°F	1 8	
TC S	-58...3200°F	1 9	
TC R	-58...+3200°F	2 0	
TCT	-94...+752°F	2 1	
Infrared J	-58...+1445°F	2 2	
Infrared K	-58...+1445°F	2 3	
PT 100/PTC KTY81-121	-328...+1562°F/-67...+302°F	2 4	
PT 1000/NTC 103-AT2	-328...+1562°F/-58...+230°F	2 5	

Note: As default, when the alarms are active, only AL1 threshold is available at "Operator Command" level to perform non critical tasks. To protect the AL2 and AL3 thresholds against undesired changes, they are available only at "Parameters list" level (password: 20). For different configurations, see the Engineering Manual.

P Q R S	User Cod 2	Cod 2	P Q R S
<b>Alarm 3</b>			<b>Service functions activation</b>
<b>Alarm 2</b>			
<b>Alarm 1</b>			
Not used	0 0 0 0		
Sensor break	1 1 1 1		
Absolute	High	2 2 2	
	Low	3 3 3	
Absolute High/Low	External High/Low	4 4 4	
	Internal High/Low	5 5 5	
Deviation	Deviation high	6 6 6	
	Deviation low	7 7 7	
Band	External band	8 8 8	
	Internal band	9 9 9	


- Note: 1. Wattmeter Instantaneous power is continuously computed as multiplication of the Load Voltage, Load Current parameter and the controller output instantaneous value.  
2. Wattmeter power consumption is the estimated hourly energy consumption (using Load Voltage and Load Current parameter values), computed on the previous 15 minutes period. The readout is updated every 15 minutes.  
3. Worked Time counter is continuously increased when the controller is turned ON.

## ALARM TYPES (Cod 2 digits: P, Q, R)

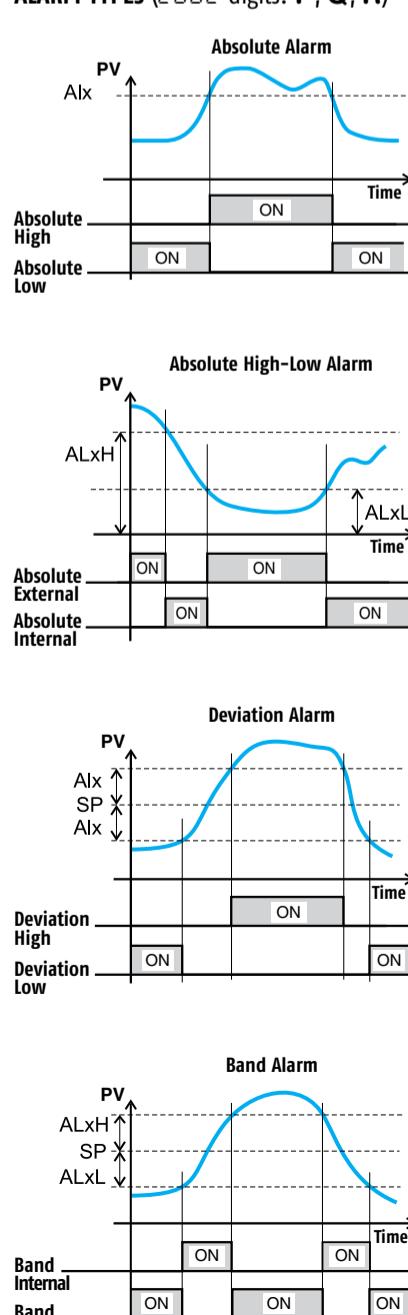

Note: To leave the Configuration session without saving the settings made, press the **Esc** key

## PARAMETERS SETTING

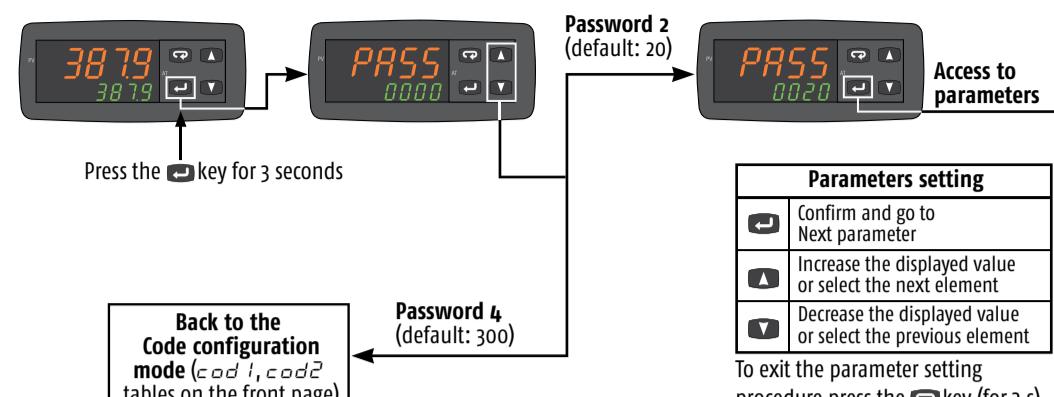

Parameters List (**PASS: 20**) (in gray the parameters related to optional features)


Group	Param.	Description	Range value or selection list elements	Default	User value	Note
Commands	<i>ErSt</i>	Timer status				Option
	<i>oPer</i>	Operative Mode Selection	reg = Auto, oplc = Manual, stdy = Standby			
	<i>RSP</i>	Set Point Selection	0 = SP, 1 = SP2, 2 = SP3, 3 = SP4	0 = SP		
	<i>tunE</i>	Start Auto Tune	0 = OFF, 1 = start	0 = OFF		SmartTUNE
Control	<i>Pb</i>	Proportional Band	1... 9999 (Engineering Units = E.U.)	20		
	<i>Ei</i>	Integral Time	0... 10000 s	200		<i>Cod1 / Digit N = 1</i>
	<i>Ed</i>	Derivative Time	0... 1000 s	50		
	<i>HSEt</i>	Hysteresis ON/OFF Control	0... 9999 (E.U.)	1		<i>Cod1 / Digit N = 0</i>
	<i>tch</i>	Heating output cycle time	0.1... 130 s	20.0		<i>Cod1 / Digit N = 1</i>
	<i>rco</i>	Relative Cooling Gain	0.01... 99.99	1.00		<i>Cod1 / Digit N = 1</i> <i>Cod1 / Digit O &gt; 4</i>
	<i>coc</i>	Cooling output cycle time	0.1... 130 s	20.0		<i>Cod1 / Digit N = 1</i> <i>Cod1 / Digit O &gt; 1</i>
Set Point	<i>SP</i>	Set Point 1	-1999... +9999 (E.U.)			
	<i>SP2</i>	Set Point 2				If <i>nSP &gt; 1</i>
	<i>SP3</i>	Set Point 3				If <i>nSP &gt; 2</i>
	<i>SP4</i>	Set Point 4				If <i>nSP &gt; 3</i>
Alarms	<i>SPLL</i>	Set Point min. Value	-1999... SPHL (E.U.)			
	<i>SPHL</i>	Set Point max. Value	SPHL... 9999 (E.U.)			
	<i>nSP</i>	No. of Set Points	1... 4	1		
	<i>RL1</i>	Alarm 1 threshold	AL1L... AL1H			
	<i>RL1L</i>	Alarm 1 low threshold/Low limit	-1999... +9999 (E.U.)	-1999		If digit <i>P</i> of <i>Cod2</i> is > 1
	<i>RL1H</i>	Alarm 1 high threshold/High limit		9999		
	<i>HRL1</i>	AL1 hysteresis	1... 9999 (E.U.)	1		
Soft Start	<i>RL2</i>	Alarm 2 threshold	AL2L... AL2H			
	<i>RL2L</i>	Alarm 2 low threshold/Low limit	-1999... +9999 (E.U.)	-1999		If digit <i>Q</i> of <i>Cod2</i> is > 1
	<i>RL2H</i>	Alarm 2 high threshold/High limit		9999		
	<i>HRL2</i>	AL2 hysteresis	1... 9999 (E.U.)	1		
Input	<i>RL3</i>	Alarm 3 threshold	AL3L... AL3H			
	<i>RL3L</i>	Alarm 3 low threshold/Low limit	-1999... +9999 (E.U.)	-1999		If digit <i>R</i> of <i>Cod2</i> is > 1
	<i>RL3H</i>	Alarm 3 high threshold/High limit		9999		
	<i>HRL3</i>	AL3 hysteresis	1... 9999 (E.U.)	1		
Timer	<i>StP</i>	Soft Start Output value	-100... 100%	0		
	<i>Stt</i>	Soft Start Time	0.00... 8.00 (hh:mm)	0		
	<i>Stc</i>	Low Scale readout	-1999... 9999	-1999		For linear Input types only
Digital Inputs	<i>FSc</i>	High Scale readout	-1999... 9999	9999		
	<i>dP</i>	Number of decimals	0... 3 (linear inputs); 0... 1 (other inputs)	0		
	<i>FtL</i>	Measured value Digital filter	OFF; 0.1... 20.0 s	0 = OFF		
	<i>ErF</i>	Timer Type	nonE = Timer not used i.d.A = Delayed ON at start command i.u.p.d = Activation ON at Power ON i.d.d = At start command i.P.L = Asymmetrical oscillator, start in OFF i.L.P = Asymmetrical oscillator, start in ON	none		Timer management (Start, Stop, Reset) can be done using the <i>ErSt</i> command or the <b>key</b> (if programmed) or by the DI1/DI2 digital inputs (if programmed).
	<i>ErU</i>	Timer Units	0 = hh:mm 1 = mm:ss 2 = sss.d	1 = mm:ss		
	<i>Er1</i>	Time 1	00.01... 995.9	1.00		
	<i>Er2</i>	Time 2	00.00... 995.9	1.00		
	<i>IO4F</i>	I/O 4 Function	ON = Transmitter Power Supply OUT4 = SSR out D12C = Dig. In. from contact D12U = 24 VDC Digital Input	ON		
Display	<i>d1F1</i>	Digital Input 1 Function	0... 21	0		See the DI1, DI2 functions table
	<i>d1F2</i>	Digital Input 2 Function	0... 21	0		
	<i>u5rb</i>	Key <b>key</b> Function	nonE, tunE, oplc, aac, asi, chsp, stby, str.t	tunE		See the <b>key</b> function table
Serial communications	<i>d1CL</i>	Colour of the Process Value display	0 = Change 1 = Red 2 = Green 3 = Orange	2		If Change, the colour is green if PV differs from SP less than <i>RdE</i> , red if higher than <i>RdE</i> and orange if is lower than <i>RdE</i>
	<i>RdE</i>	Display change color threshold (when <i>d1CL</i> = 0)	0 (OFF)... 9999 (e.u.)			
Wattmeter	<i>d1St</i>	Display Power OFF time (mm:ss)	0FF (display ON) 0... 99.59	0FF		
	<i>UoLt</i>	Instrument Address	1... 254	1		Modbus RTU slave protocol
	<i>bRud</i>	Baud rate	1200, 2400, 9600 baud, 19.2, 38.4 kbaud	9600		
	<i>UoLt</i>	Load Voltage	1... 999 (V)	230		If digit <i>S</i> of <i>Cod2</i> is > 1
Password	<i>cur</i>	Load Current	1... 9999 (A)			
	<i>PR54</i>	Configuration access Password	0... 999	300		
	<i>PR52</i>	Parameters access Password	0... 999	20		

Note: To access all the instrument features, please see the "Complete configuration procedure" in the "Engineering Manual". Complete Configuration and Parameter setting can be easily uploaded from the controller and downloaded to other controllers using the Configuration Key and Communication Adapter model: KEYA01.


## FUNCTION SELECTION

### Timer Types (selected by *ErF*) (option)


#### *dR* Delayed ON at Start command

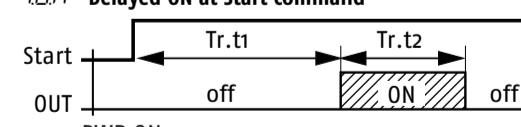


#### *dPd* Delayed ON at Power ON

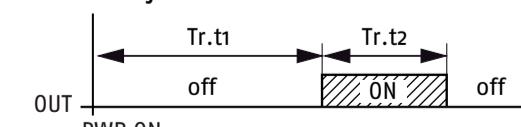


#### *dd* At Start command

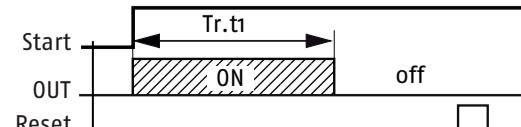

#### *P.L* Asymmetrical oscillator with start in OFF

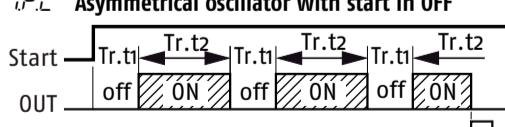

#### *L.P* Asymmetrical oscillator with start in ON

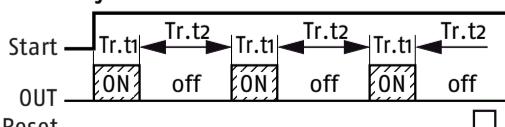

### *d1F* Digital Inputs DI1 and DI2 Functions

Code displayed	Description
0	Disabled (OFF) (default)
1	Alarm Reset
2	Alarm Acknowledge (ACK)
3	Hold of the measured value
4	Stand by mode
5	Manual Mode
6	Heat with "SP" and Cool with "SP2"
7	Timer Run/Hold/Reset [on transition]
8	Timer Run [on transition]
9	Timer Reset [on transition]
10	Timer Run/Hold
11	Timer Run/Reset
12	Timer Run/Reset with lock at the end of the time count
18	Sequential Set Point selection [on transition]
19	SP/SP2 selection
20	Binary coding for Set Point selection on DI1 and DI2 (00 = SP, 01 = SP2, 10 = SP3, 11 = SP4)
21	Digital inputs in parallel to <b>key</b> and <b>key</b> (DI1 = <b>key</b> , DI2 = <b>key</b> )

### *u5rb* Key **key** Function

Code displayed	Description
nonE	Not used
<i>tunE</i>	Starts auto tuning functions (default)
<i>oplco</i>	Manual mode
<i>RRc</i>	Alarm Reset
<i>AS</i>	Alarm Acknowledge
<i>chSP</i>	Circular Set Point Selection (shows SP, SP2, SP3)
<i>Stby</i>	Stand-by mode
<i>Stt</i>	Starts/Stop/Reset timer